

1) COMPATIBLE VEHICLES : VOLVO S60, S80, V40, V60, XC60, XC70

*HOW TO SET S/W [(ON)-Down 0 : ↓ off on / (OFF)-Up 1 : ↑ off on]



DIP_SW1 : Navigation On/Off
 DIP_SW2 : AV1 On/Off
 DIP_SW3 : AV2 On/Off
 AV3 (Setting On OSD)
 DIP_SW4 : Rear Camera On/Off
 DIP_SW5,6,7,8,9 : X
 DIP_SW10 : On



1,1,1,1,1,0 : S60, XC60



1,1,0,1,1,0 : V40



1,1,1,0,1,0 : V60




1,1,0,0,1,0 : XC70

2) HOW TO SWITCH SCREEN : PRESS **NAVI** FOR SHORT
 [ORIGINAL-NAV1-NAV2-NAV3-NAV4]
 SWITCH MODES SEQUENTLY



3) COMMAND BEHIND THE [CAN]

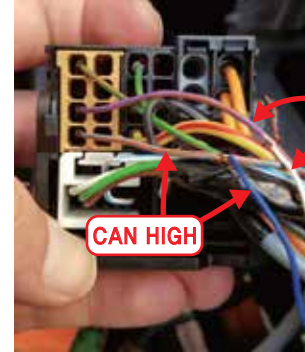

CAN LOW

CAN HIGH

CAN LOW PURPLE/ORANGE (CAN) } OEM
 CAN HIGH ORANGE/WHITE (CAN)

CAN LOW WHITE (CAN) } INTERFACE
 CAN HIGH BLUE (CAN)


4) HOW TO SWITCH REAR CAMERA :

DO NOT USE BACK WIRE CABLE WHEN YOU CONNETING COMMAND CONTROLLER CAN (SWITCH BY CAN)
 12V OUTPUT WHEN REVERSING (SWITCH TO REAR CAMERA)


*HOW TO SET R/C



PRESS **OK** BUTTON 4 TIMES THAN
 YOU WILL SEE THE NUMBER **1** ON THE
 LEFT TOP OF THE SCREEN FROM 1~4
 WHEN IT'S NUMBER 4, PRESS THE **POWER**
 BUTTON TO ENTER THE SETTING MODE.

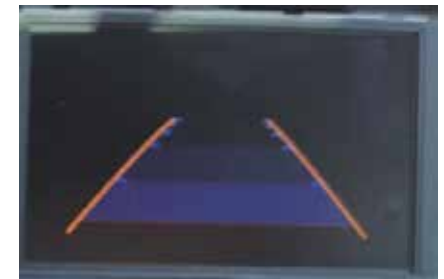

[COMPONENTS]

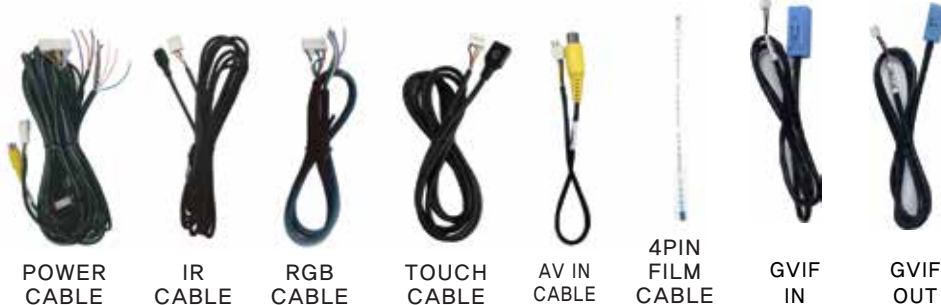

MAIN UNIT

*OPTIONAL



R/C

AV IN/OUT CABLE

※POWER CABLE※

- ACC, B+
- GND
- CAM REAR 12V OUT
- IR
- CAN HIGH - NO. 11
- CAN LOW - NO. 9
- REVERSE